

NV9 OPERATIONS MANUAL

INTELLIGENCE IN VALIDATION



CONTENTS

1	Introduction	3
2	Environment and power requirements	5
3	General description	6
4	NV9 user interface	7
4.1	DIPswitch settings	8
4.2	LED Status codes	8
5	Interface: hardware description	9
5.1	Interface connector pin details	9
5.2	Input and output hardware circuits	10
5.3	Serial interface input and outputs	10
6	Machine interfaces: protocols	12
6.1	Parallel input and output	12
6.2	Pulse stream output	12
6.3	Binary output - BIN	13
6.4	Serial input/output – SIO (Baud rate is defaulted to 300)	14
6.5	Serial input/output – SI2 (Baud rate is defaulted to 9600)	17
6.6	Smiley® Secure Protocol (SSP)	18
6.7	Multi-Drop Bus / internal communications protocol (MDB/ICP)	19
6.8	ccTalk® protocol - CCT	20
6.9	Non-isolated serial protocol (NIS)	21
7	Updating currency and firmware files	21
7.1	ITL Bank Note Validator Currency Manager	21
7.2	Validator Programming System (DA3)	22
8	Mechanical installation	22
8.1	Changing or removing the bezels	22
8.2	Cash box options	22
9	Routine maintenance	23
9.1	Cleaning	23
9.2	Note path debris clearing / belt changing	25
10	Fault finding analysis	26
11	Support tools	27
11.1	ITL Bank Note Validator Currency Manager	27
11.2	Validator programming system (DA3)	27
11.3	Internet website support	27
11.4	E-mail support	27
	Appendix	28
	Appendix A - Drawings	29
	Appendix B - Escrow control	34
	Appendix C - Interface tools DA1 - DA2	35
	Appendix D - Bezels	37
	Appendix E - Cash boxes	38
	Appendix F - PC system specification	39
	Index	40

1 INTRODUCTION

This manual describes the operation of the NV9 Bank Note Validator as fitted with Firmware Version 3.15 or greater.

CAUTIONS:

- **THIS PRODUCT MUST BE FITTED WITH A 2 AMP FUSE BEFORE USE.**
- **THE NV9 VALIDATOR IS PIN FOR PIN COMPATIBLE WITH NV7/8/10 BUT NOT PIN FOR PIN COMPATIBLE WITH THE NV2/3/4/4X OR 5 SERIES PRODUCTS.**
-

We recommend that you study this manual as there are many new features permitting new uses and more secure applications.

This document is intended for those who will:

- Design the NV9 into items of equipment.
- Build equipment using the NV9.
- Install equipment containing the NV9.
- Maintain equipment containing the NV9.

Although information is included which will allow a degree of fault diagnosis and repair, it is recommended that for all but simple mechanical repairs the unit be returned to an approved service centre for repair.

CAUTIONS:

- **NEVER EXCEED THE RECOMMENDED ENVIRONMENTAL AND ELECTRICAL LIMITS.**
- **DO NOT ATTEMPT TO LUBRICATE THE MECHANISMS AS THIS MAY AFFECT THE NOTE TRANSPORT.**
- **DO NOT POLISH THE LENS AS THIS MAY ALTER THE OPTICAL CHARACTERISTICS.**
- **IF THE NV9 VALIDATOR IS DISASSEMBLED THE UNIT MUST BE RE-CALIBRATED/RE INITIALISED, FOLLOWING RE-ASSEMBLY.**

Innovative Technology Ltd has a policy of continual product improvement. As a result the products supplied may vary from the specification described here.

The NV9 Validator has been designed to minimise any performance variation over time. Much of this is achieved by careful Hardware and Software design. Innovative Technology Ltd has a policy of continual product improvement. As a result the products supplied may vary from the specification described here. This manual can be printed in A4 or letter sizes.

MAIN HEADQUARTERS

Innovative Technology Ltd
Derker Street – Oldham – England - OL1 4EQ
Tel: +44 161 626 9999 Fax: +44 161 620 2090
E-mail: support@innovative-technology.co.uk
Web site: www.innovative-technology.co.uk

GROUP



EMAIL CONTACT

BRAZIL

suporte@bellis-technology.com.br

CHINA

support@innovative-technology.co.uk

COLUMBIA

support@automated-transactions.net

GERMANY

support@automated-transactions.de

ENGLAND

support@innovative-technology.co.uk

SPAIN

soporte@automated-transactions.es

UNITED STATES OF AMERICA

supportusa@bellis-technology.com

REST OF THE WORLD

sales@innovative-technology.co.uk

2 ENVIRONMENT AND POWER REQUIREMENTS

ENVIRONMENT

Environment	Minimum	Maximum
Temperature	+3°C	+50°C
Humidity	5%	95% Non condensing

Table 1 - Environmental Requirements

CAUTIONS:

IF THE INPUT VOLTAGE FALLS BELOW +11V, THE NV9 MAY NOT OPERATE CORRECTLY (THE VALIDATOR WILL REJECT NOTES). THE AMBER STATUS LED AND FRONT BEZEL LIGHTS WILL FLASH TO INDICATE INCORRECT CONDITIONS.

IT IS ESSENTIAL THAT THE POWER SUPPLY USED CAN SUPPLY AT LEAST 1.5 AMPS.

POWER REQUIREMENTS

Electrical Supply	Minimum	Maximum
Supply Voltage (V DC) Absolute Limits	+11 V	+15 V
MDB IF5 Version Supply Voltage	+18V	+48V DC or 34VAC
Supply Ripple Voltage	0 V	0.25 V @ 100 Hz
Supply Currents:		
Standby		0.35 A
Validating		1 A
Peak (Stacker Motor Stall)		1.5 A

Table 2 - Power Requirements

3 GENERAL DESCRIPTION

The NV9 Bank Note System is a compact note-validating machine (see figure 1), suitable for most money machines. It will accept up to 15 different denominations of notes in the Serial control mode, Pulse mode and Binary mode, 4 different notes in parallel mode, and will cope with different designs of banknotes having the same value such as are found in the United Kingdom and Scotland.

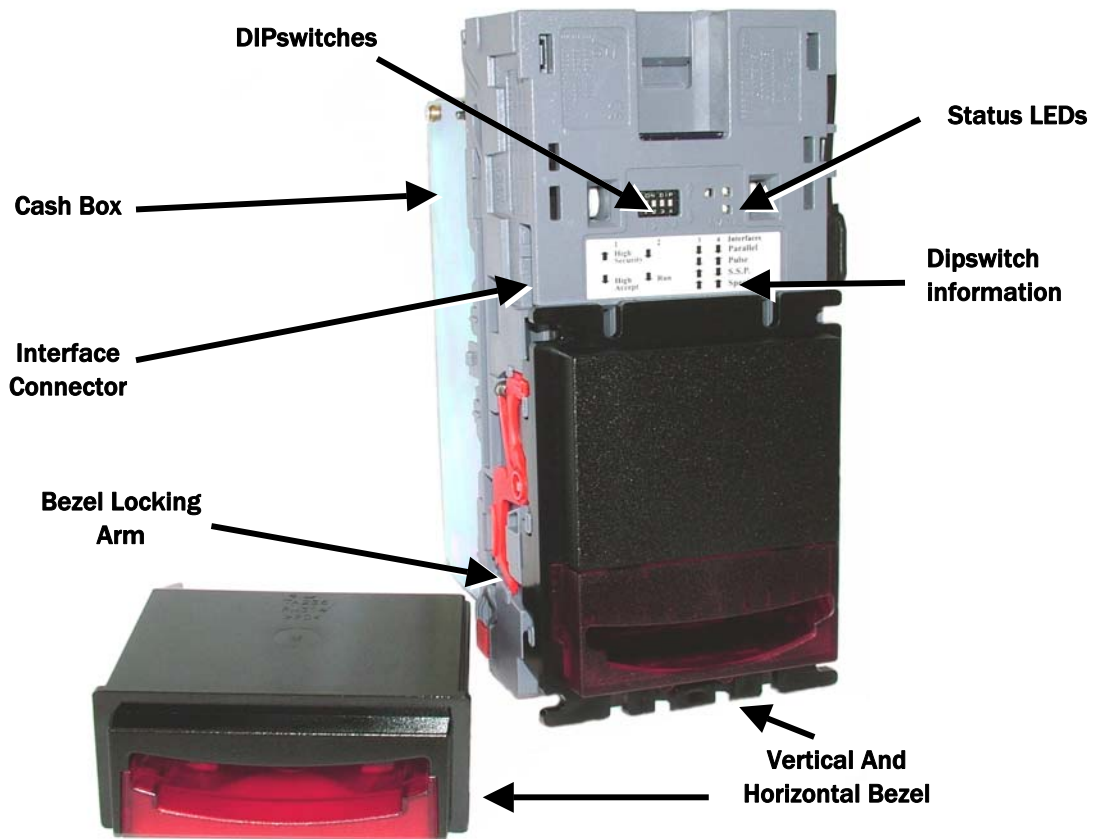


Figure 1 - The NV9 validator

The NV9 Validator leaves the factory containing at least one currency data set so that it is ready for immediate installation. If it is desired to change the currency data set this may be done using either the PC based Currency Management software or the DA3 Validator Programming System.

New currencies and applications are being tested all the time, please refer to our web site or contact the factory for information concerning specific currencies if they are not already included on our approved list.

The NV9 is designed for easy installation in most machines. The stepped "Smiling Mouth" allows insertion of notes with one hand and simplifies the note handling mechanism.

Interfacing the Validator is very simple, with the choice of the following protocols:

- Parallel open collector outputs.
- Pulse stream open collector output.
- Binary open collector output.
- Smiley® Secure Protocol (SSP) secure serial communications.
- Simple serial I/O communications.
- MDB interface protocol.
- ccTalk
- Extended Interface / USA Serial (NIS)

4 NV9 USER INTERFACE

The user interface with the NV9 is shown below (see figure 2). It is simply a set of four DIPswitches and a RED LED, GREEN LED and an AMBER LED mounted on the top of the NV9. The DIPswitches set the basic operating mode of the unit, while the LED's indicate the operational status of the NV9.

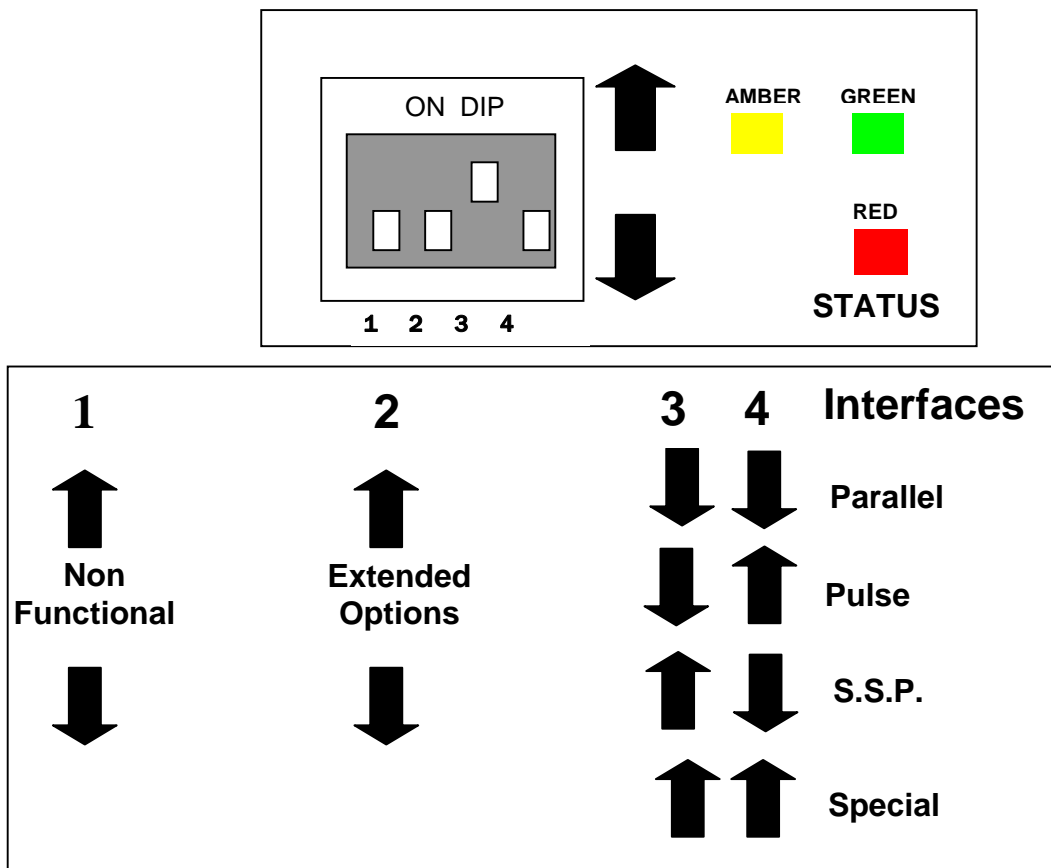




Figure 2 - User Display and DIPswitch Settings

4.1 DIPSWITCH SETTINGS

The four DIPswitches can be set to a combination of either up  or down  depending on the configuration required for the particular NV9.

Switch 1 – Spare

Switch 1 currently has no function and is reserved for future use.

Switch 2 – Extended Options

This switch is used to modify the behaviour of the selected machine interface. Details of the function of this switch are covered in the interfaces' description in this manual.

Switches 3 and 4 – Machine Interface protocol selection

These switches are used to select the machine interface to be used. The NV9 supports numerous interfaces, as shown below, (see table 1).

Interface	Switch 3	Switch 4
Parallel	Down	Down
Pulse	Down	Up
SSP	Up	Down
Special	Up	Up

Table 3 - Switch 3 and 4 Machine Interface Selection

The details of the parallel, pulse, and SSP can be found in the machine interface protocols section of this manual.

Special Modes

The special interface depends on the firmware that is used in the NV9, the firmware shipped as standard is ccTalk (unless specified by order). The table below shows all the options that can be downloaded by the user:

BINARY
SIO
MDB
ccTalk
SI2
CCNet
NIS & Unencrypted ccTalk available on request only

Information on each of these interfaces can be found in the 'machine interfaces protocol section' of this manual.

4.2 LED STATUS CODES

The three status LED's are located to the right of the DIPswitches on the top of the unit and are used to indicate a variety of status signals.

The red status is used to indicate system problems, while the green status indicates system health; these are described below in table 2.

1	Vend 1	Open Collector Output. Function changes depending on Machine Interface Protocol. (See individual interface descriptions for details) Also the Pulse Stream output. Also the serial Output pin in SSP Serial Mode, and other serial modes.
2	Vend 2	Open Collector Outputs. Function changes depending on Machine Interface Protocol. (See individual interface descriptions for details)
3	Vend 3	
4	Vend 4	
5	Inhibit 1	Inhibit channel 1 by holding this pin HIGH. To Enable a channel the inhibit must be held LOW Also the serial Input pin in SSP Serial Mode, and other serial modes
6	Inhibit 2	Inhibit channel 2 by holding this pin HIGH
7	Inhibit 3	Inhibit channel 3 by holding this pin HIGH
8	Inhibit 4	Inhibit channel 4 by holding this pin HIGH
9	Busy	NV9 is validating and stacking output. Active low while the NV9 is reading, transporting or stacking a note.
10	Escrow	Operate Escrow function by holding LOW (see Appendix B for full details)
11	Factory Use Only	Do not connect
12	Factory Use Only	Do not connect
13	Factory Use Only	Do not connect
14	Factory Use Only	Do not connect
15	+Vin	Nominal 12V DC supply
16	0V	0V supply

Table 5 - 16 Pin connector details

5.2 INPUT AND OUTPUT HARDWARE CIRCUITS

CAUTION: THE OUTPUT LOW SIGNAL IS AFFECTED BY THE VALUE OF THE PULL UP RESISTOR ON THE HOST MACHINE INTERFACE. ENSURE YOUR SIGNAL LOW LEVELS COMPLY WITH THE 74HC CMOS SERIES SPECIFICATION FOR RELIABLE OPERATION (SEE FIGURE 4).

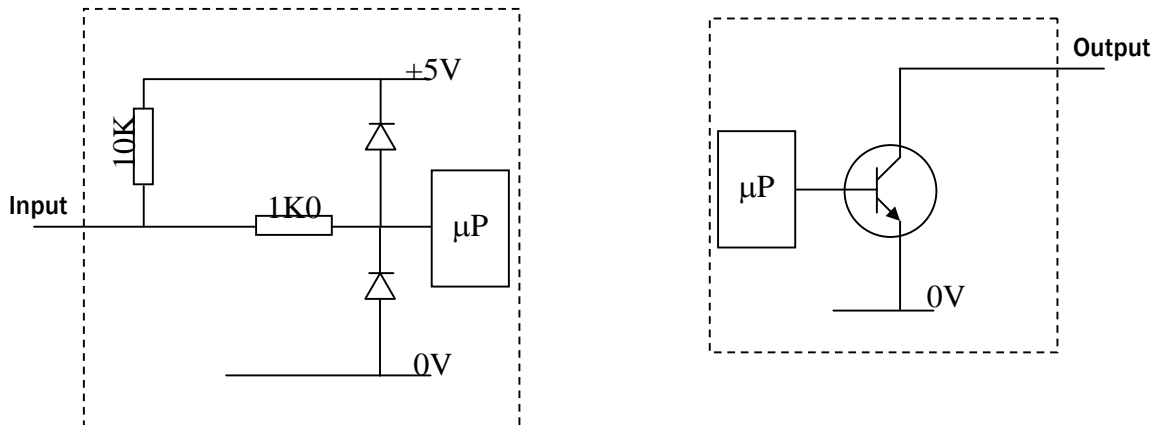


Figure 4 - Input and Output Circuits

6 MACHINE INTERFACES: PROTOCOLS

The NV9 is set to the required Protocol/Interface, by setting the DIPswitches on top of the NV9 to the positions detailed below:

6.1 PARALLEL INPUT AND OUTPUT

To use parallel output for 4 notes/channel acceptance, DIPswitches 3 and 4 must be set down. This mode is selectable regardless of which extended interface is programmed into the validator. (**DIPswitch 2 is not functional in this mode**)

Vend Signals: (Pins 1 to 4). The four channels have their own individual outputs. If a note is recognised then the relevant Vend line is set low for a period of 100 ± 3 ms. Pulses outside these limits should be rejected as a precaution against false triggering.

Busy Output: (Pin 9). This is a general-purpose busy signal. It is active low while the NV9 is in operation.

Escrow Control: (Pin 10) Hold this pin Low to enable the single note escrow function. (See Appendix B).

If the host machine aborts the transaction by setting the corresponding inhibit input high, the note is returned immediately.

The host machine can force the return of the note to the customer by setting the inhibit line high, at any time before the end of the 30 second time-out. Setting high, all the inhibits, causes a note reject.

In the event of a note being forcibly removed from the mouth of the NV9 during the 30-second interval, the NV9 will go out of service for 45 seconds.

Inhibit Operation: (Pins 5 – 8) Channel 1 to 4 have their own inhibit input to allow the host machine to refuse specified notes. To inhibit a channel, the relevant inhibit input must be held high. To enable a channel, the corresponding inhibit must be latched low so that notes may be accepted.

If all four inhibits are high simultaneously then the NV9 will be disabled. In this state the bezel will not illuminate and if a note is inserted the motor will run in reverse preventing the insertion of the note.

All four inhibits may be connected together to create a 'global' inhibit. In this way the NV9 may be brought in and out of operation by the host machine.

6.2 PULSE STREAM OUTPUT

To use pulse stream output for acceptance of up to 16 channel / note acceptance, DIPswitch 3 must be down and DIPswitch 4 must be up. This mode is selectable regardless of which extended interface is programmed into the validator

Vend Signal: (Pins 1) When a note is recognised vend 1 will pulse a pre set number of times, the number of pulses and the timing is set in the ITL BNV validator manager program (and set to default values with supplied dataset).

DIPswitch 2: Used to select/de-select the X4 Pulse Multiplier.

Down – Number of pulses are as programmed in the dataset.

Up – Number of pulses is multiplied by 4 (Useful for USD Datasets)

Busy Output: (Pin 9). This is a general-purpose busy signal. It is active low while the NV9 is in operation.

Escrow Control: (Pin 10). Hold this pin Low to enable the single note escrow function. (See Appendix B).

If the host machine aborts the transaction by setting the corresponding inhibit input high, the note is returned immediately.

The host machine can force the return of the note to the customer by setting the inhibit line high, at any time before the end of the 30 second time-out. Setting all the inhibits high causes a note reject.

In the event of a note being forcibly removed from the mouth of the NV9 during the 30-second interval, the NV9 will go out of service for 45 seconds.

Inhibit Operation: (Pins 5 – 8) Channels 1 to 4 have their own inhibit input to allow the host machine to refuse specified values of notes. To inhibit a channel, the relevant inhibit input must be held high. To enable a channel, the corresponding inhibit must be latched low so that notes may be accepted.

If all four inhibits are high simultaneously then the NV9 will be disabled. In this state the bezel will not illuminate and if a note is inserted the motor will run in reverse preventing the insertion of the note.

Note: Channels higher than four cannot be individually inhibited, but will be globally inhibited if inhibits 1 to 4 are inhibited.

6.3 BINARY OUTPUT – BIN

To use Binary mode DIPswitches 3 and 4 must be in the Up position to select 'Special' mode on the validator and the BIN option of the interface firmware must be loaded into the NV9. **(Dipswitch 2 is not functional in this mode)**

In the event that the machine needs more than 4 notes to be recognised, but the host machine cannot take advantage of the serial communication methods then the NV9 can be set to give a binary pattern output on the four parallel output pins.

If the NV9 is set to binary mode it will issue the vend signals as a binary pattern on the parallel outputs for $100 \pm 3\text{ms}$. In this way a maximum of 15 different notes can be accepted and 4 notes individually inhibited.

Vend Signals: (Pins 1 to 4). The four channels have their own individual outputs. If a note is recognised the binary representation of the channel number will be pulled low for $100 \pm 3\text{ms}$. Pulses outside these limits will be rejected as a precaution against false triggering due to noise.

Busy Output: (Pin 9). This is a general-purpose busy signal. It is active low while the NV9 is in operation.

Escrow Control: (pin 10). Hold this pin Low to enable the single note escrow function. (See Appendix B).

If the host machine aborts the transaction by setting the corresponding inhibit input high on pin 10, the note is returned immediately.

The host machine can force the return of the note to the customer by setting the inhibit line high, at any time before the end of the 30 second time-out. Setting all the inhibits high causes a note reject.

In the event of a note being forcibly removed from the mouth of the NV9 during the 30-second interval, the NV9 will go out of service for 45 seconds.

Inhibit Operation: (Pins 5 – 8) Channels 1 to 4 have their own individual inhibit input to allow the host machine to refuse specified values of notes. To inhibit a channel, the relevant inhibit input must be held high. To enable a channel the corresponding inhibit must be latched low so that notes may be accepted.

If all four inhibits are high simultaneously then the NV9 will be disabled. In this state the bezel will not illuminate and if a note is inserted the motor will run in reverse preventing the insertion of the note.

Note: Channels higher than four cannot be individually inhibited, but will be globally inhibited if inhibits 1 to 4 are inhibited.

6.4 SERIAL INPUT/OUTPUT – SIO (BAUD RATE IS DEFAULTED TO 300)

Existing Smiley® NV4 users may already be using the serial input/output facility in conjunction with the parallel inputs. The NV9 Validator also supports this system. However this interface is not recommended for new designs, the Smiley® Secure Protocol SSP interface is recommended.

CAUTION:

- **THE NV9 DOES NOT SUPPORT THE SIMPLE SERIAL DATA OUT ONLY MODE AS AVAILABLE ON NV4 AND EARLIER MODELS NV2 AND NV3. IT ONLY SUPPORTS THE SERIAL DATA INPUT/OUTPUT MODE.**
- **THE HOST MACHINE DOES NOT ECHO MESSAGES BACK TO THE VALIDATOR.**
- **THE NV9 DOES NOT OPERATE IN TRUE RS232 MODE. (ONLY TTL LEVEL).**
- **THE NV9 WILL NOT ENABLE IN SERIAL I/O MODE IF INHIBIT 3 LINE IS HELD LOW ON POWER UP**

To use simple serial mode DIPswitches 3 and 4 must be in the Up position to select 'Special' mode on the validator and the SIO option of the interface firmware must be loaded into the NV9. (Dipswitch 2 is not functional in this mode)

Commands are provided to fully control the operation of the NV9, the notes to be accepted and rejected can be set and a single note escrow mode can be enabled. In simple serial mode single byte commands are transmitted to the Validator, the Validator echoes each valid command it receives.

The Host machine needs to wait for an echo to a command it sends or for 1 second after sending a command before it sends its next command. If it does not receive an echo response and times out after 1 second then it should retry sending the previous command.

The NV9 will receive and transmit the following event codes.

Recognised Receive Codes to NV9		Transmitted codes from NV9	
MESSAGE	DECIMAL VALUE	MESSAGE	DECIMAL VALUE
Inhibit C1	131	Note Accept on C1	1
Inhibit C2	132	Note Accept on C2	2
Inhibit C3	133	Note Accept on C3	3
Inhibit C4	134	Note Accept on C4	4
Inhibit C5	135	Note Accept on C5	5
Inhibit C6	136	Note Accept on C6	6
Inhibit C7	137	Note Accept on C7	7
Inhibit C8	138	Note Accept on C8	8
Inhibit C9	139	Note Accept on C9	9
Inhibit C10	140	Note Accept on C10	10
Inhibit C11	141	Note Accept on C11	11
Inhibit C12	142	Note Accept on C12	12
Inhibit C13	143	Note Accept on C13	13
Inhibit C14	144	Note Accept on C14	14
Inhibit C15	145	Note Accept on C15	15
Inhibit C16	146	Note Accept on C16	16
Un-inhibit C1	151	Note Not Recognised	20
Un-inhibit C2	152	Mechanism running slow	30
Un-inhibit C3	153	Strimming attempted	40
Un-inhibit C4	154	Channel 5 Note Rejected (fraud channel)	50
Un-inhibit C5	155	STACKER Full or Jammed	60
Un-inhibit C6	156	Abort During Escrow	70
Un-inhibit C7	157	Note may have been taken to clear jam	80
Un-inhibit C8	158	Validator Busy	120
Un-inhibit C9	159	Validator Not Busy	121
Un-inhibit C10	160	Command Error	255
Un-inhibit C11	161		
Un-inhibit C12	162		
Un-inhibit C13	163		
Un-inhibit C14	164		
Un-inhibit C15	165		
Un-inhibit C16	166		
Enable serial escrow mode	170		
Disable serial escrow mode	171		
Accept escrow	172		
Reject escrow	173		
Status	182		
Enable all	184		
Disable all	185		
Disable escrow timeout	190		
Enable escrow timeout	191		
Request firmware	192		
Request dataset	193		

Table 8 - Receive and Transmit Codes

Example transactions are shown below (see table 9):

Event	Validator	Decimal Value	Host
Note entered into validator	Validator Busy	120→	
Note accepted channel 2	Validator Ready	121→	
	Accept on channel 2	2→	
Note entered into validator	Validator Busy	120→	
Note not recognised	Validator Ready	121→	
	Note not recognised	20→	
Validator has returned note	Validator Ready	121→	
Software Inhibit Channel 4	Inhibit C4	←134	Inhibit C4
	Channel 4 inhibited	134→	
Software Enable Channel 4	Uninhibit C4	←154	Uninhibit C4
	Channel 4 inhibited	154→	
Status Report		←182	Status Request
	Status Requested	182→	
3 byte status message	Inhibit status Channels 1-8	Byte 1→	
	Inhibit status Channels 9-16	Byte 2→	
	Escrow On (=1) / Off (=0)	Byte 3→	
Turn on Escrow Mode		← 170	Enable Escrow Mode
	Escrow Mode Enabled	170→	
Note accept in Escrow Mode			
Note entered into validator	Validator Busy	120→	
Note Accepted Channel 2	Validator Ready	121→	
	Accept on Channel 2	2→	
		←172	Accept Note in Escrow
	Accept Escrow	172→	
	Accept on Channel 2	2→	
Request firmware version	Firmware requested 4 byte ascii string	←192 192→ 0321(ascii)	Request
Request dataset code	Firmware requested 8 byte ascii string	←193 193→ EUR02901(ascii)	Request dataset

Table 9 – Example protocols

6.5 SERIAL INPUT/OUTPUT – SI2 (BAUD RATE IS DEFAULTED TO 9600)

This mode is identical to the SIO mode detailed in chapter 7.4 with the exception of the Baud rate used and the data format.

- Only 9600 baud rate is available.
- Inhibit 2 has no function.
- All Transmit and Receive codes and Example protocols are the same as in Chapter 6.4 (See tables 8 and 9 above)

The data is formatted as follows:

1-start bit, 8-data bits, 1-stop bits, 9600 baud.

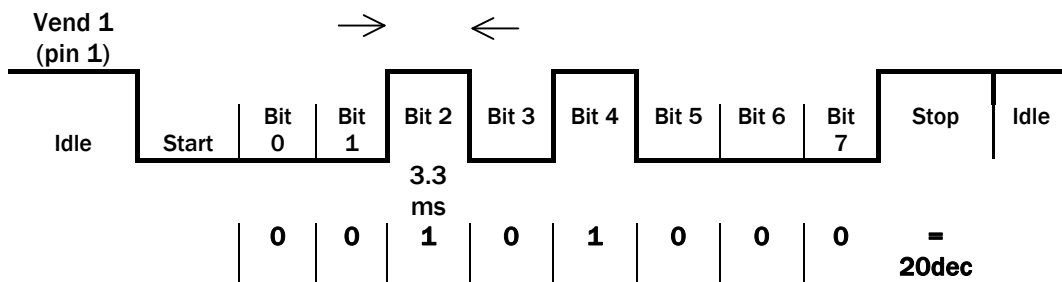


Figure 6 - Typical Serial Output: Transmission of the value 20 (decimal),
Note not recognized

6.6 SMILEY® SECURE PROTOCOL - SSP

NOTE: Please refer to the Smiley® Secure Protocol (SSP) Specification (ITL Drawing GA138) on the web site for full details of the SSP protocol.

To use SSP mode DIPswitch 3 must be set up and DIPswitch 4 must be set down. This mode is selectable regardless of which extended interface is programmed into the validator. (DIPswitch 2 is non functional in this mode).

SSP is a secure serial interface specifically designed to address the problems experienced by cash handling systems in gaming machines. Problems such as acceptor swapping, reprogramming acceptors and line tapping are all addressed. This interface is recommended for all new designs.

The interface uses a master slave model, the host machine is the master and the peripherals (note acceptor, coin acceptor or coin hopper) are the slaves. Data transfer is over a multi-drop bus using clock asynchronous serial transmission with simple open collector drivers. The integrity of data transfers is ensured through the use of 16 bit CRC checksums on all packets.

Each SSP device of a particular type has a unique serial number; this number is used to validate each device in the direction of credit transfer before transactions can take place. Commands are currently provided for coin acceptors, note acceptors and coin hoppers. All current features of these devices are supported.

Features:

- Serial control of Note / Coin Validators and Hoppers
- 4 wire (Tx, Rx, +V, Gnd) system
- RS232 (TTL) - open collector driver
- High Speed 9600 Baud Rate
- 16 bit CRC error checking
- Data Transfer Mode



Benefits:

- Proven in the field
- Simple and low cost interfacing of transaction peripherals.
- High security control of payout peripherals.
- Defence against surrogate validator fraud.
- Straightforward integration into host machines.
- Remote programming of transaction peripherals
- Open standard for universal use.

For detailed information and full protocol specification please refer to SSP Interface Specification ITL (Drawing GA 138), this is available from the ITL website www.innovative-technology.co.uk.

To help in the software implementation of the SSP, ITL can provide DLL controls and Visual Basic applications on request. Please contact support@innovative-technology.co.uk

6.7 MULTI-DROP BUS/INTERNAL COMMUNICATIONS PROTOCOL (MDB/ICP)

To use the MDB mode an IF5 interface box must be fitted to the NV9 Validator. DIPswitches 3 & 4 must be in the up position to select 'Special' mode on the validator and the MDB option of the interface firmware loaded into the NV9. **(DIPswitch 2 enables a fast reset on power up).**

The Fast Reset option should be set if the NV9 continuously resets the stacker after the machine is powered on. The Fast Reset option can be enabled via the Validator Manager Software, or by setting Dipswitch 2 to the ON position.

Note:

- Please refer to the Multi-Drop Bus specification for the suggested current drive circuits available.
- The NV9 supports the MDB protocol version 1, level 1
- For detailed information and full protocol specification please refer to www.vending.org

MDB defines a serial bus interface used in electrically controlled vending machines (see figure 6). This is a 9600 Baud Master-Slave system where the NV9 banknote validator is a slave to a master controller. A master has the capability of communicating with 32 peripherals or slaves. The master is defined as the Vending Machine Controller (VMC).

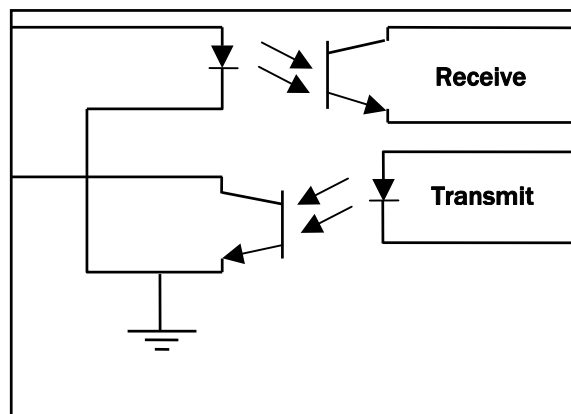


Figure 7 - MDB Opto Isolated Input / Output circuits NV9 MDB Slave

6.9 NON-ISOLATED SERIAL PROTOCOL (NIS)

To use NIS mode DIPswitches 3 and 4 must be in the Up position to select 'Special' mode on the validator and the NIS option of the interface firmware must be loaded into the NV9. (DIPswitch 2 is not functional in this mode).

There is a single output DATA line from the NV9. There are three control lines, two from the controller "ACCEPT ENABLE" and "SEND" and one from the Validators IRQ (INTERRUPT) (see table 10).

CAUTIONS:

- PLEASE NOTE THAT THE NV9 IS REQUIRED TO OPERATE ON A +12VOLT DC POWER SUPPLY.
- THE NV9 GROUND MUST BE CONNECTED TO THE GROUND OF THE CONTROL SYSTEM.
-

For further details on this protocol please refer to the series 2000 interface manual (reference number 20105-002850046-PS), or contact support@innovative-technology.co.uk.

Connection Details:

Signal	NV9
+12V	15
0V	16
ACCEPT ENABLE	6
SEND	7
IRQ (INTERRUPT)	2
DATA	1
OUT_OF_SERVICE	3

Table 10 - Extended Interface USA Serial

7 UPDATING CURRENCY AND FIRMWARE FILES

Note: Validators are supplied already programmed from the factory Please skip this section unless the validators need to be re-programmed with an updated Currency Firmware file.

The NV9 Validator can only be re-programmed using the ITL Bank Note Validator Currency Manager 3.2.0 or greater or via a DA3.

Note: Cloning is not available for the NV9 with firmware 3.20 and later (March 2007)

7.1 ITL BANK NOTE VALIDATOR CURRENCY MANAGER

In order to use the ITL Bank Note Validator Currency Manager software, which is supplied with a range of currencies, it must be installed from the DA1/DA2 CD or by downloading from the web site. For the PC System Specification refer To Appendix F.

A list of currently supported currencies is maintained on our web site, where new releases can be downloaded. Further details are available from support@Innovative-technology.co.uk

7.2 VALIDATOR PROGRAMMING SYSTEM (DA3)

Refer to chapter 11.2 for more details.

8 MECHANICAL INSTALLATION

The NV9 validators can be supplied with various bezels options as shown in Appendix D.

8.1 CHANGING OR REMOVING THE BEZELS

Push both of the red locking arms so that they disengage from the bezel sides. The bezel may then be unhooked from the 6 locating points, (see figure 10). To refit push the bezel onto the six locating points (3 each side). The red locking arms will spring back to secure the bezel

CAUTION: ALWAYS MAKE SURE THAT BOTH THE LOCKING ARMS HAVE FULLY LOCATED IN TO PREVENT DAMAGE.

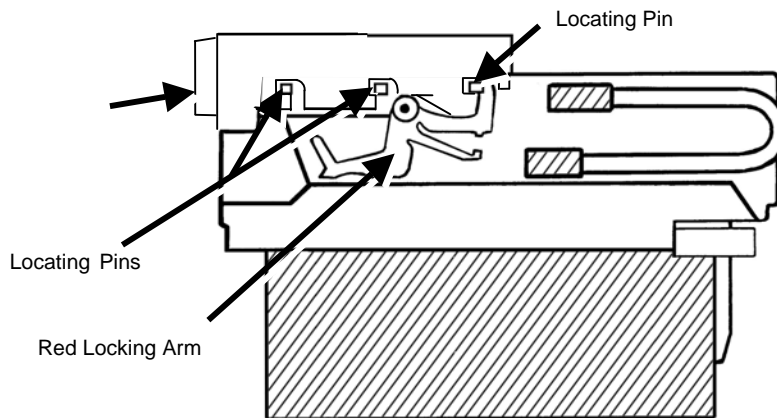


Figure 9 - Bezel and Validator Removal

8.2 CASH BOX OPTIONS

The NV9 validators can be supplied with various cash box options, shown in Appendix E.

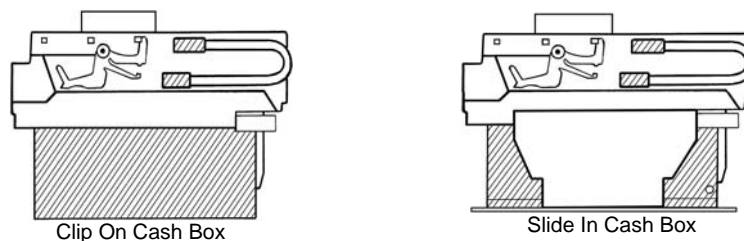


Figure 10 - Clip On and Slide in Cash Boxes

- 300 Note Clip on (part no PA185) for the vertical bezel options only.
- 300 Note Slide in (part no PA192) for both the horizontal and vertical bezel options.
- 600 Note Clip on (part no PA193) for the vertical bezel options only.
- 600 Note Slide in (part no PA194) both the horizontal and vertical bezel options.
- 300 Note Lockable for the horizontal bezel option only (part no PA186). Lock is not supplied – use with Baton Lock type 6086-00KAL06 with supplied cam).

9 ROUTINE MAINTENANCE

The NV9 Validator has been designed to minimise any performance variation over time. Much of this is achieved by careful hardware and software design. However, depending upon the environment the NV9 may at some time require cleaning, belt changing or note path clearing.

9.1 CLEANING

CAUTION: DO NOT USE SOLVENT BASED CLEANERS SUCH AS ALCOHOL, PETROL, METHYLATED SPIRITS, WHITE SPIRIT OR PCB CLEANER. THIS WILL RESULT IN PERMANENT DAMAGE TO THE VALIDATOR, ONLY USE A MILD DETERGENT.

To clean, slide the red release catch on the end of the NV9 Validator to the left, to open the note path. The note path and lozenge are now exposed for cleaning.

Carefully wipe the surfaces with a soft lint free cloth that has been dampened with a water and mild detergent solution (i.e. household washing up liquid). Take particular care around all the sensor lenses (see figure 12), ensuring they are clean and dry.

CAUTION: WHEN CLEANING THE RECESSED FRONT SENSORS, USE A SMALL SOFT BRUSH OR COTTON WOOL BUD

If a lens has become badly scratched do not attempt to polish it. Contact ITL for further advise, as there may be damage to the optical properties of the lens


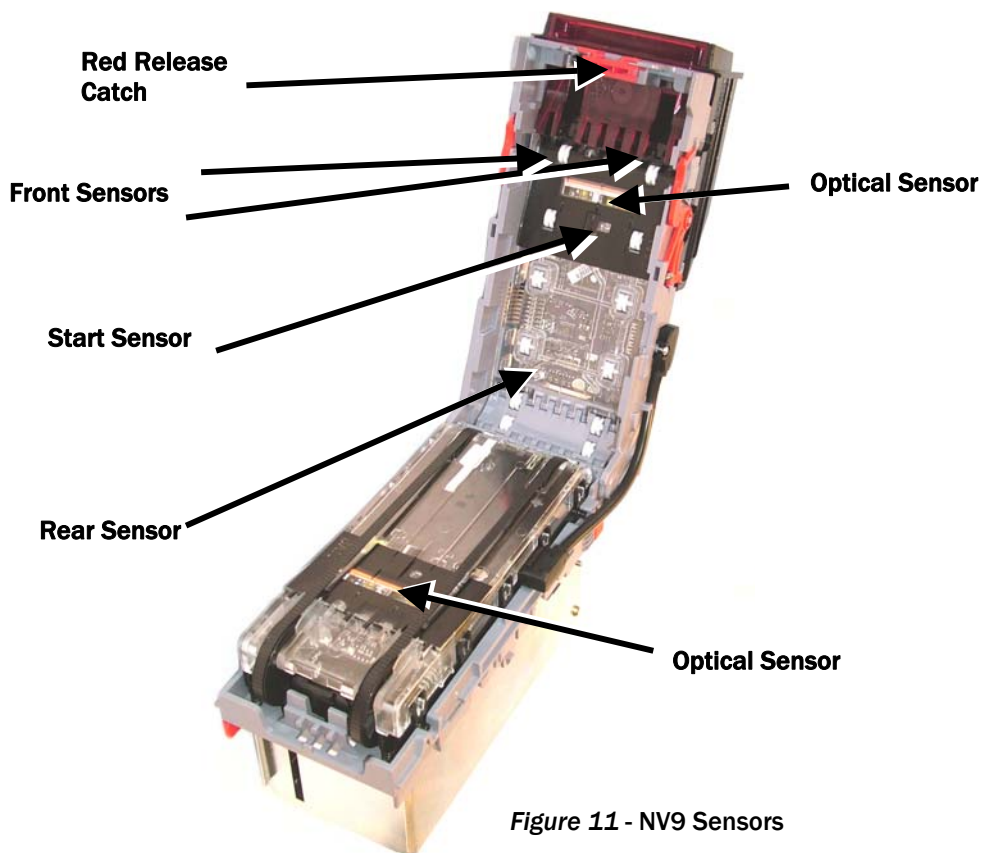


Figure 11 - NV9 Sensors

Belt Cleaning

1. Ensure the validator is enabled (i.e. Bezel lights are illuminated)
2. Remove Bezel.
3. Insert a piece of paper, which is narrower than the width between the two belts, in the centre of the note path to activate the drive motor.
4. Use a lint free cloth dampened with water containing a mild detergent such as dish detergent and hold it against each drive belt as it turns.
5. Repeat steps 3 and 4 until all dust and debris has been removed from both belts.
6. Repeat step 3 using a DRY lint free cloth to remove any excess moisture.

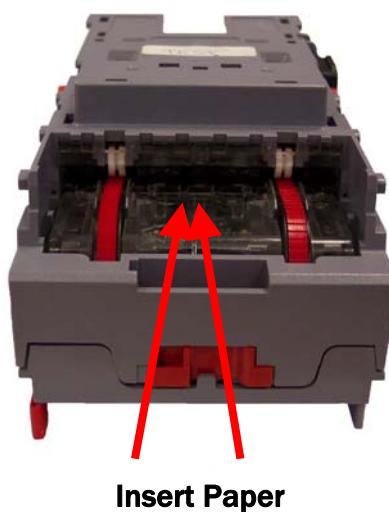

9.2 NOTE PATH DEBRIS CLEARING / BELT CHANGING

To access the note path and lozenge, slide the red release catch on the end of the NV9 Validator and lift to open. Push the lozenge release catch and lift; the note path and lozenge are now exposed for maintenance (see figure 13).

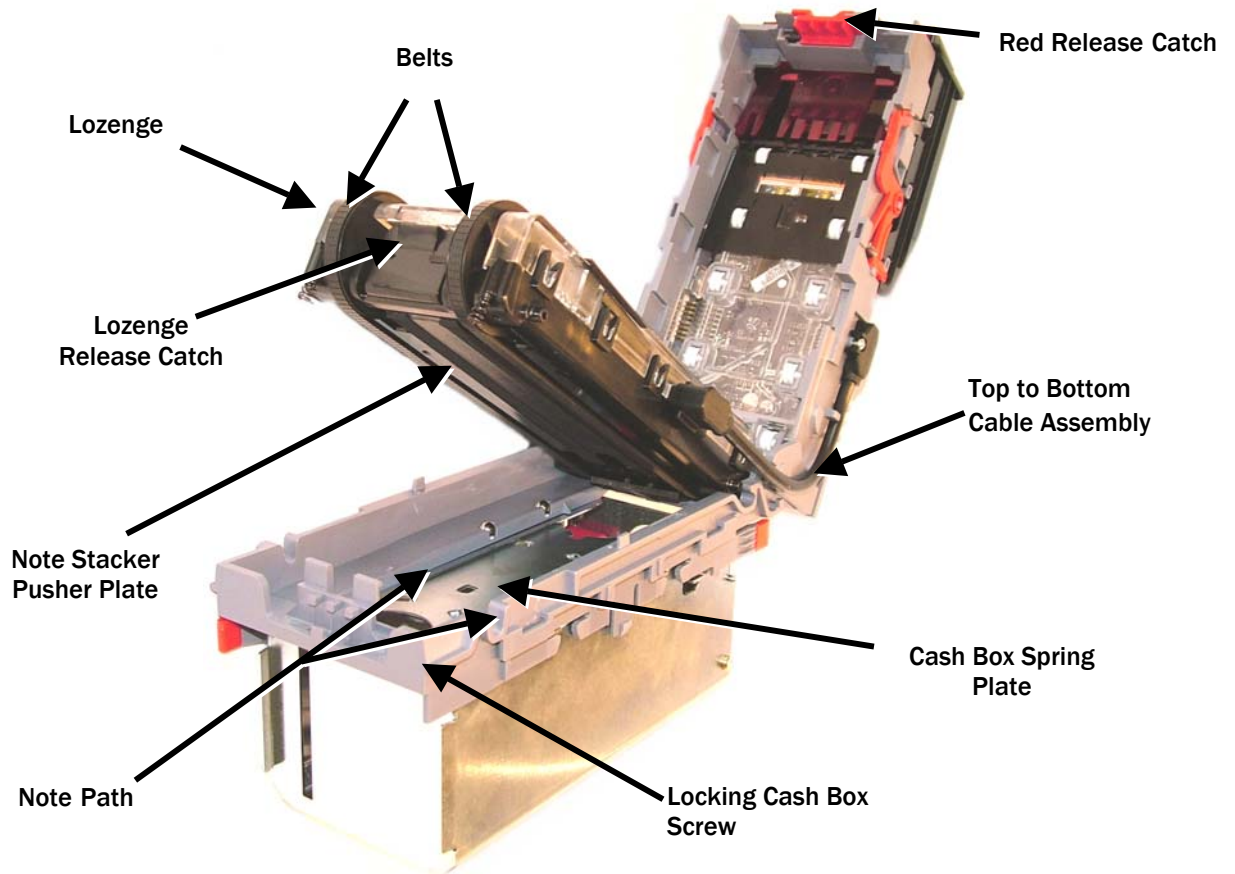


Figure 12 - NV9 Note Path and Lozenge Access

Debris Clearing

Examine the note paths, lozenge and note stacker for any dirt or debris. Carefully clear and wipe the surfaces of the note paths and lozenge with a soft lint free cloth that has been dampened with a water and mild detergent solution (i.e. household washing up liquid.). Take particular care around all the sensor lenses (see figure 12), ensuring they are clean and dry. Check that the note stacker and cash box spring plate are not jammed.

Belt Changing

With the NV9 lozenge exposed (see figure 13) carefully unplug the bottom connector of the "top to bottom cable assembly" from the lozenge.

Remove and place the lozenge on a clean dry surface and remove the belts, sliding them off the smallest wheels first. Replace the belts using the reverse procedure from the above.

NOTE: With the Locking Cash Box, the Locking screw must be removed first.

10 FAULT FINDING ANALYSIS

PROBLEM	CHECK	SOLUTION
Validator will not accept notes	<p>Is the Bezel lit? Are any "STATUS" lights lit?</p> <p>Is the problem with all notes or just one denomination</p> <p>Is the Top to Bottom cable connected properly?</p>	<p>Check the Power Supply specification Check the LED Status codes (Chapter 4.2). Check correct interface is programmed in using VALIDATOR MANAGER software.</p> <p>Check the inhibit lines (pins 5 –8) from Host machine to Validator.</p> <p>Test cable for continuity and refit.</p>
Validator runs slowly and/or intermittently	<p>Check note paths for foreign objects Check note path for damage Check Voltage level of supply Check drive belts are fitted correctly Ensure that there is no grease on the drive belts</p>	<p>Clean the note path.</p> <p>Replace damaged parts</p> <p>Ensure PSU meets the required specification Refit belts</p> <p>Replace belts</p>
Notes are accepted but no credit received	<p>Is the PSU within specification? Has the correct interface been selected?</p>	<p>Check Power Supply specification</p>
Validator rejects genuine notes	<p>Is the correct currency file programmed?</p> <p>Is the required note contained in the Currency file? Are sensors ok</p>	<p>Check correct Currency is programmed in using Validator Manager software Contact Support with "Issue Date" and "Note Denomination" for details</p> <p>Run Diagnostics in Validator Manager</p>

11 SUPPORT TOOLS

The following support tools are available for use with the NV9 Bank Note Validator:

- ITL Bank Note Validator Currency Manager Software.
- Validator Programming System (DA3)
- Downloads from the Innovative Technology Ltd website: www.innovative-technology.co.uk
- E-mail Support via support@innovative-technology.co.uk

NOTE: The Validator must be in SSP mode when connected to a computer and then returned to the original Settings when complete

11.1 ITL BANK NOTE VALIDATOR CURRENCY MANAGER

The ITL BNV Currency Manager software offers the following functions:

- Program the Validator by downloading pre-prepared currency data via the DA1 or DA2 kit.
- Check the firmware version and currency set already loaded on an NV9 unit.
- Adjust the channel and pulse configuration on a pre-programmed NV9 to your own requirements.
- Download a new version of firmware onto the NV9.
- Use diagnostic functions to check Validators operation (firmware version 3.15 and greater only).

The software will run on an IBM compatible Personal Computer with Pentium™ processor or equivalent (see Appendix F for operating system requirements) and requires a DA1 kit fitted to the serial port or DA2 kit fitted to the USB port. (See Appendix C)

11.2 VALIDATOR PROGRAMMING SYSTEM (DA3)

The DA3 is a programming system designed to enable the programming of ITL Bank Note Validators in the field without the use of a PC.

Once the DA3 has been programmed the user can:

- Update the existing software within a validator to the latest versions using the BNV Match Download function.
- Overwrite the existing software within a validator with pre-selected (Tagged) files using the BNV Override Download function.
- Test the functionality of the validator away from the Host machine.

For full DA3 operation and functionality details please refer to the DA3 User Manual (Document number GA339).

11.3 INTERNET WEBSITE SUPPORT

The Innovative Technology Ltd website provides the means to download new and updated currency sets and new versions of firmware for the NV9. You can obtain these along with technical bulletins by visiting www.innovative-technology.co.uk

11.4 E-MAIL SUPPORT

If the data you require is not available over the Internet Innovative Technology supports an e-mail system to help customers with unusual requirements. The address is: support@innovative-technology.co.uk

APPENDIX

APPENDIX A - DRAWINGS



DRG No: GA328




ACCEPTS NOTES UP TO 82mm x 160mm LONG

SUPPLY AND POWER : NV9 11-15v
 RIPPLE 0.25v AT 100MHz
 CONSUMPTION STAND BY 350mA
 VALIDATING 1000mA
 PEAK 1500mA

ENVIRONMENTAL OPERATING RANGE :
 +3°C TO 50°C AT 5% TO 95% RH (NON-CONDENSING)

UNLADEN WEIGHT : 1700g

CONTACT ADDRESS :
 INNOVATIVE TECHNOLOGY LTD
 DERKER STREET, OLDHAM
 ENGLAND OL1 4EQ
 TEL : +44(0)161 626 9999
 +44(0)161 620 2090
 Email : sales@innovative-technology.co.uk

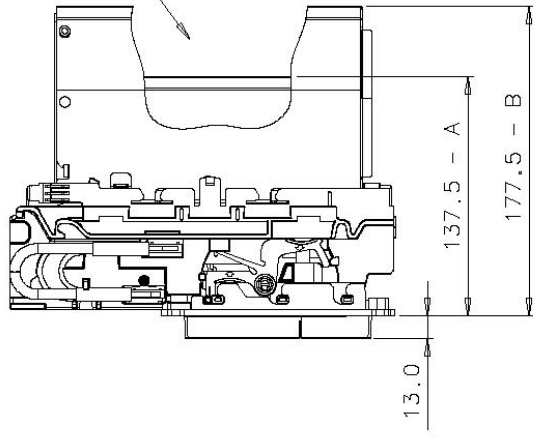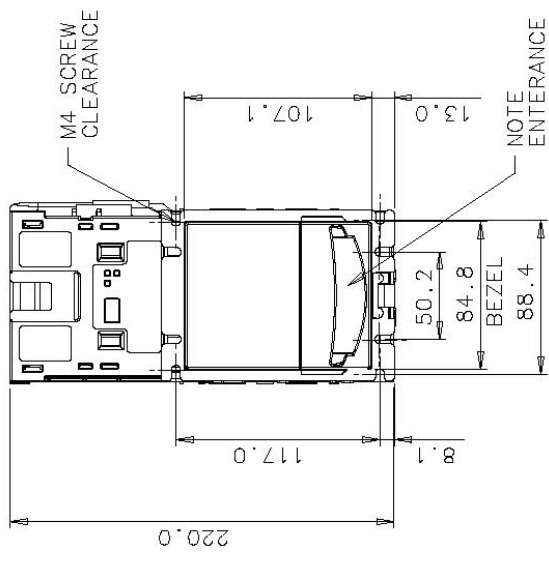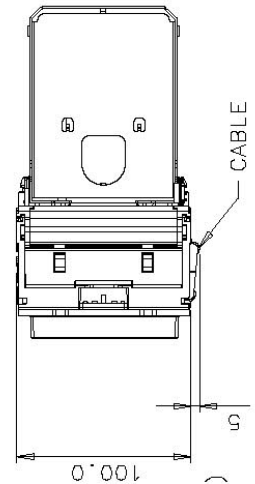

A	137.5	300 CLIP-ON CASH BOX
B	177.5	600 CLIP-ON CASH BOX

DO NOT SCALE
 IF IN DOUBT - ASK !!
 ALL DIMENSIONS SHOWN ARE NOMINAL SIZES.
 3rd ANGLE PROJECTION.

REFERENCE ONLY:
 DESTROY AFTER USE.
 ALWAYS REFER TO LATEST ISSUE.

1	PROD-REL	28-6-05	MKS
ISSUE No.	MOD No.	DATE	MOD BY
C.A.D. GENERATED - MOD'S TO BE DONE VIA MAGNETIC MEDIA			



DATE	27-6-05	SCALE	NTS	MATERIAL	FINISH	TOOL No.
MKS	PO	CHECKED	PO	TITLE:	NV9 OUTLINE DRAWING VERTICAL UPSTACKER - FLAT	
DRAWN						DRG No.
CHECKED						GA328
TITLE:						ISSUE
NV9 OUTLINE DRAWING VERTICAL UPSTACKER - FLAT						1

COPYRIGHT CONTAINED IN THIS DRAWING IS THE PROPERTY OF INNOVATIVE TECHNOLOGY LTD ©



CONTACT ADDRESS :
 INNOVATIVE TECHNOLOGY LTD
 DERKER STREET, OLDHAM
 ENGLAND OL1 4EQ
 TEL : +44(0)161 626 9999
 +44(0)161 620 2090

Email :
 sales@innovative-technology.co.uk

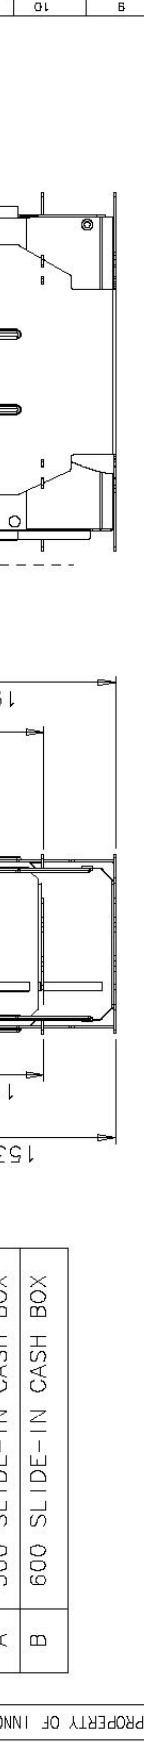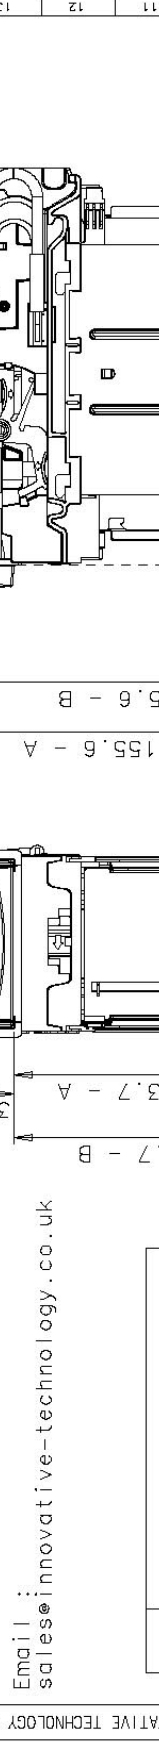

ACCEPTS NOTES UP TO 82mm x 160mm LONG


SUPPLY AND POWER : NV9 11-15v
 RIPPLE 0.25v AT 100MHz
 CONSUMPTION STAND BY 350ma
 VALIDATING 1000ma
 PEAK 1500ma

ENVIRONMENTAL OPERATING RANGE :
 +3°C TO 50°C AT 5% TO 95% RH (NON-CONDENSING)

UNLADEN WEIGHT : 1700g

REFERENCE ONLY:
 DESTROY AFTER USE.
 ALWAYS REFER TO LATEST ISSUE.

DO NOT SCALE		IF IN DOUBT - ASK !!!		SCALE		MATERIAL		FINISH		TOOL No.	
1	PROD-REL	28-6-05	MKS	DATE	27-6-05	NTS					
ISSUE No.	MOD No.	DATE	MOD BY	CHECKED	PD						
C.A.D. GENERATED - MODS TO BE DONE VIA MAGNETIC MEDIA				TITLE: NV9 OUTLINE DRAWING				DRG No. GA329			
				ALL DIMENSIONS SHOWN ARE NOMINAL SIZES.							
				3rd ANGLE PROJECTION.							
				IRROVATIVE TECHNOLOGY LIMITED							
				BENEFIT ST. OLDFAM							
				ENGLAND, OL1 4EQ							
				TELEPHONE: 0161 626 9999							
				FAX: 0161 626 2090							

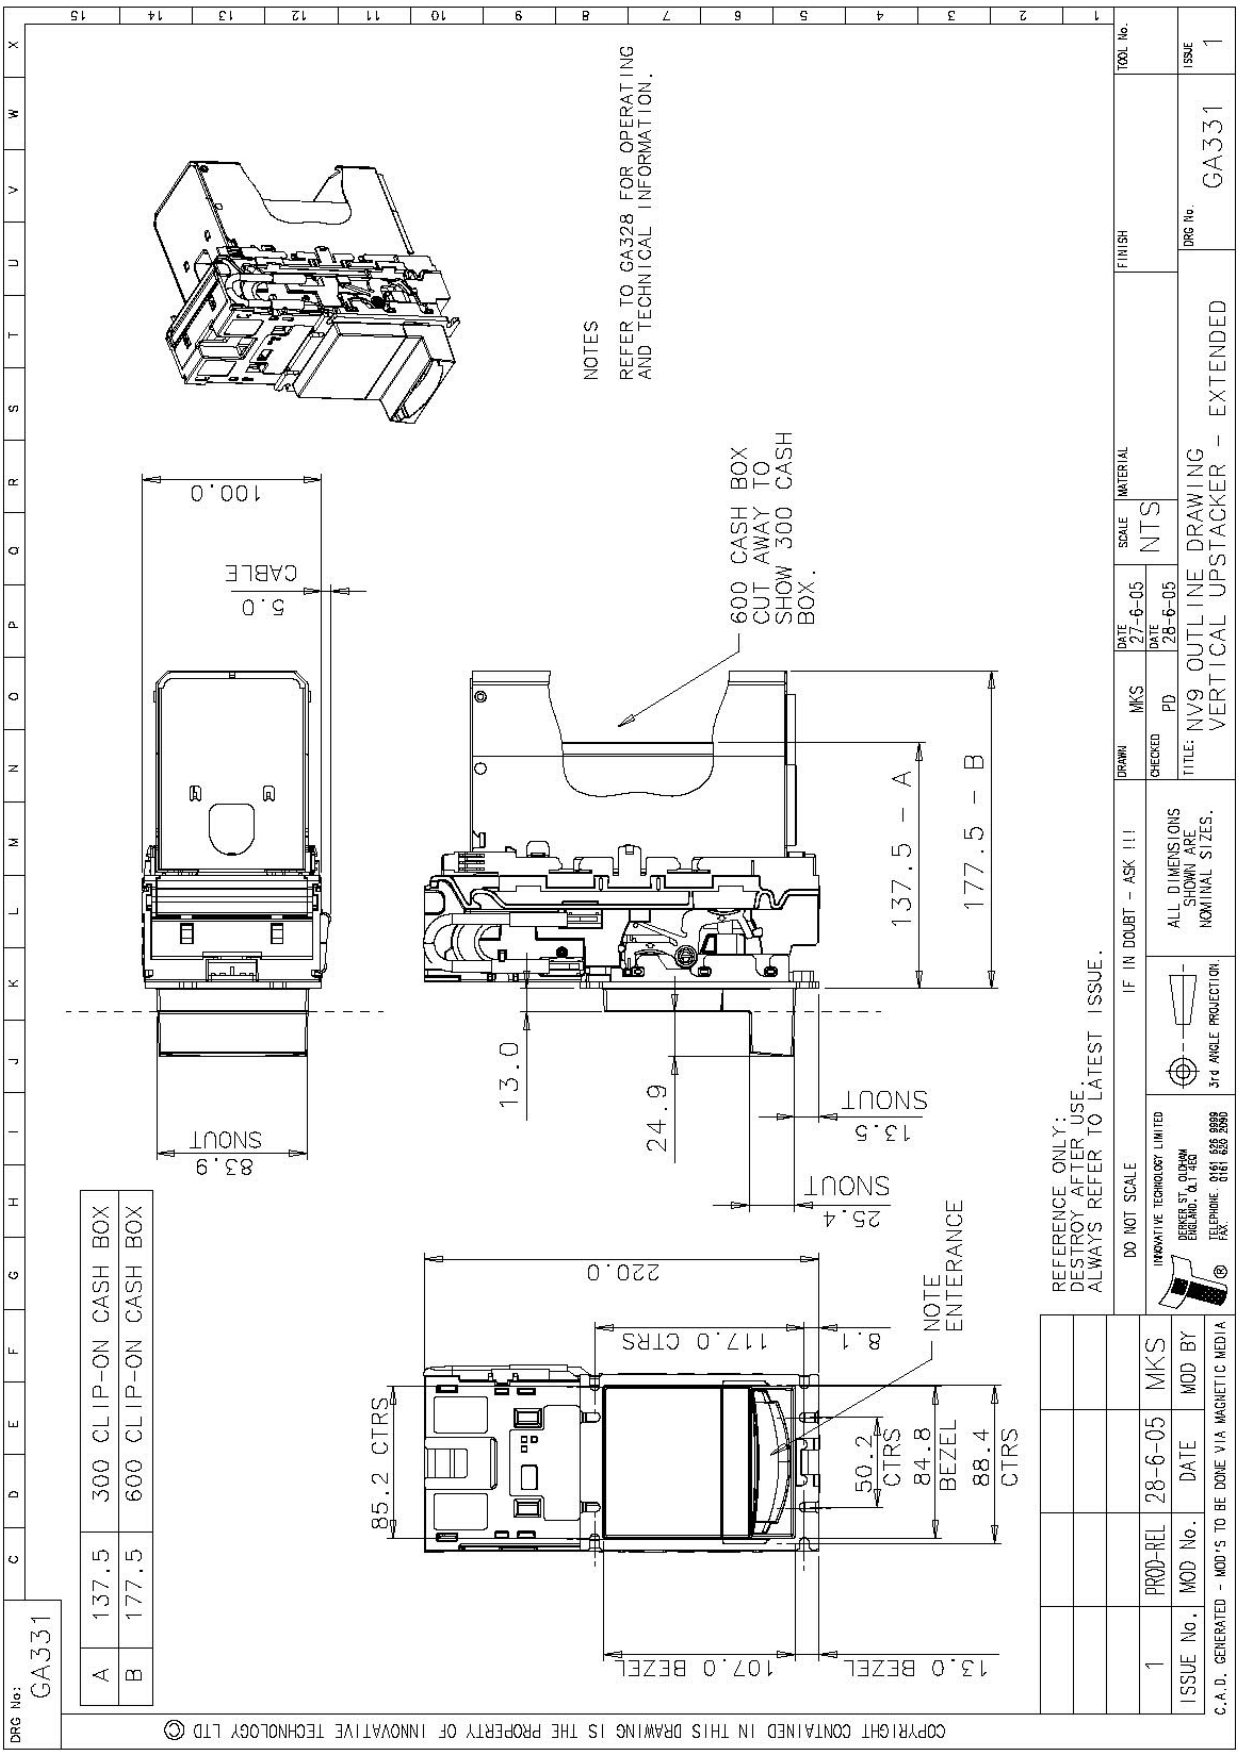

DRG No:	GA331	
A	137.5	300 CLIP-ON CASH BOX
B	177.5	600 CLIP-ON CASH BOX

1	PROD-REL	28-6-05	MKS	IF IN DOUBT - ASK !!!	DO NOT SCALE	REFERENCE ONLY: DESTROY AFTER USE. ALWAYS REFER TO LATEST ISSUE.
ISSUE No.	MOD No.	DATE	MOD BY	3/4 ANGLE PROJECTION	INNOVATIVE TECHNOLOGY LIMITED BERKELEY, OUKHIM ENGLAND, G1 1 4E0 TELEPHONE: 0161 626 8998 FAX: 0161 626 8995	ALL DIMENSIONS SHOWN ARE NOMINAL SIZES.

DATE	27-6-05	SCALE	MATERIAL	FINISH	TOOL No.
DATE	28-6-05	NTS			
DRWN	MKS	CHECKED	PD	TITLE: NV9 OUTLINE DRAWING VERTICAL UPSTACKER - EXTENDED	DRG No. GA331
ISSUE	1				ISSUE

NOTES
REFER TO GA328 FOR OPERATING AND TECHNICAL INFORMATION.

600 CASH BOX CUT AWAY TO SHOW 300 CASH BOX.

13.0 BEZEL

85.2 CTRS

117.0 CTRS

8.1

50.2 CTRS

84.8 BEZEL

88.4 CTRS

220.0

13.5 SNOUT

25.4 SNOUT

24.9

13.0

137.5 - A

177.5 - B

100.0

5.0 CABLE


83.9 SNOUT

NOTE
ENTRANCE

COPYRIGHT CONTAINED IN THIS DRAWING IS THE PROPERTY OF INNOVATIVE TECHNOLOGY LTD ©

C.A.D. GENERATED - MOD'S TO BE DONE VIA MAGNETIC MEDIA



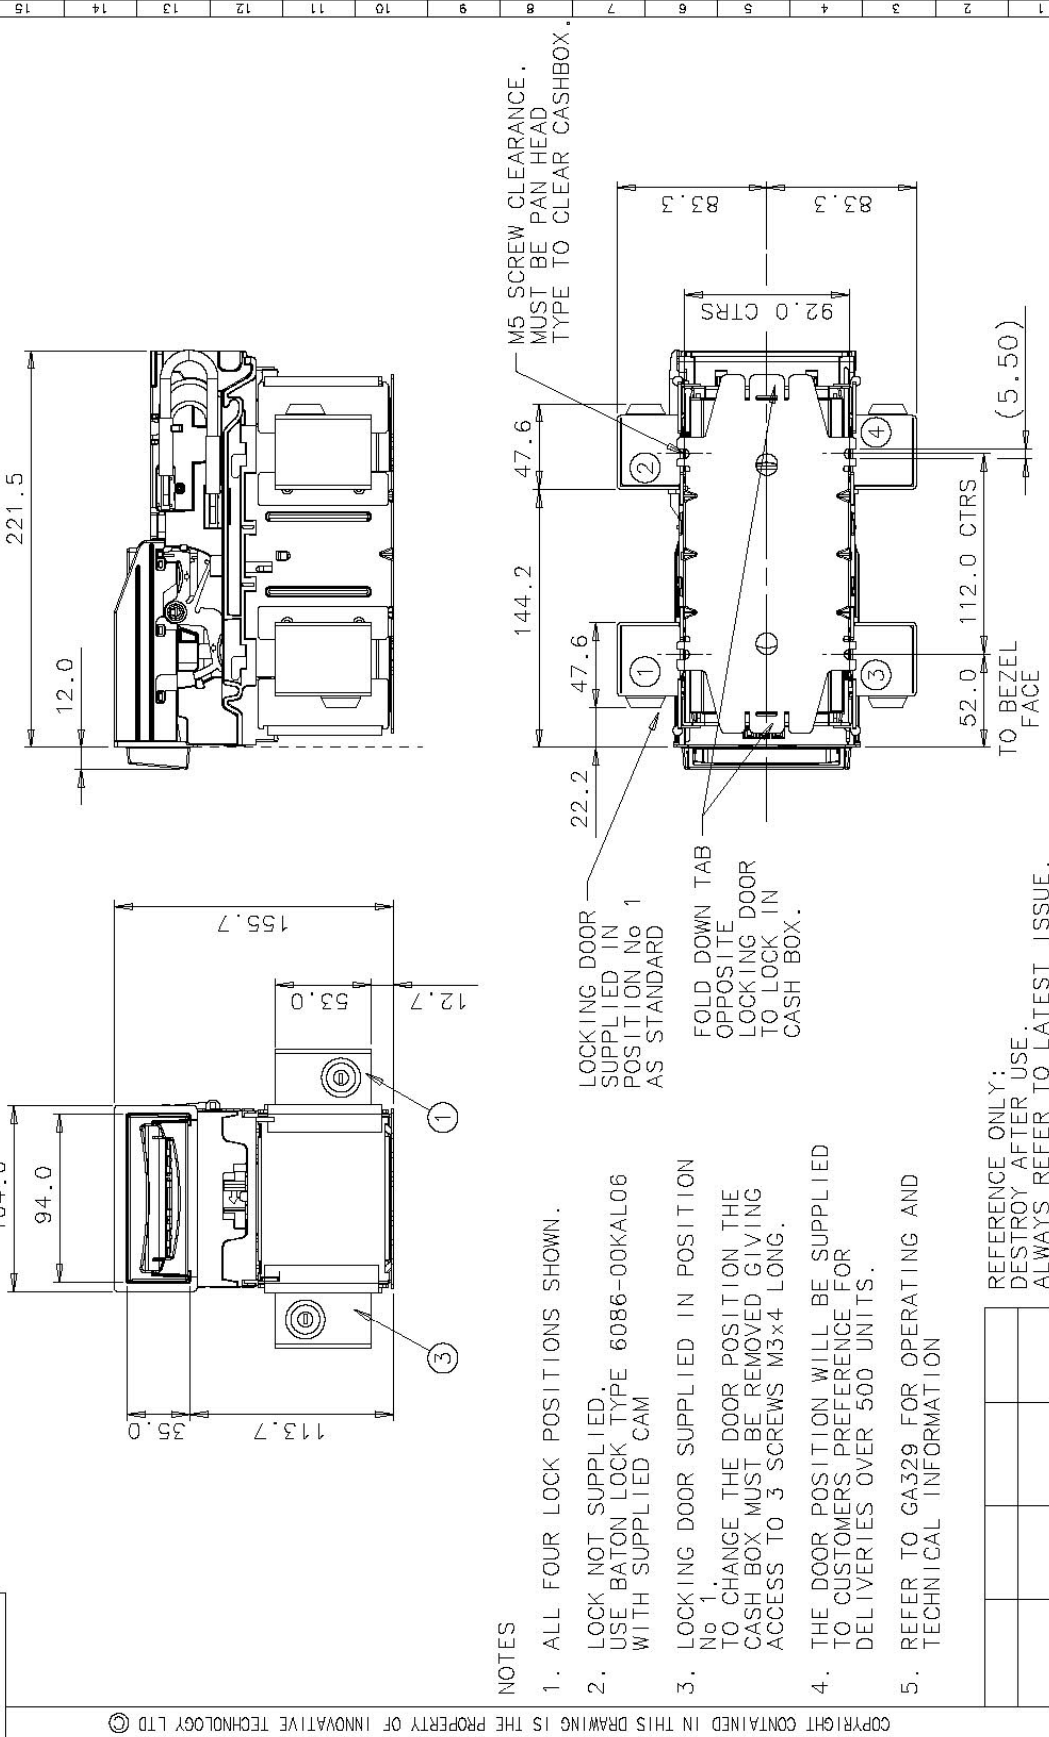

M5 SCREW CLEARANCE. MUST BE PAN HEAD TYPE TO CLEAR CASHBOX.

LOCKING DOOR SUPPLIED IN POSITION No 1 AS STANDARD

FOLD DOWN TAB OPPOSITE LOCKING DOOR TO LOCK IN CASH BOX.

REFERENCE ONLY: DESTROY AFTER USE. ALWAYS REFER TO LATEST ISSUE.

NOTES

1. ALL FOUR LOCK POSITIONS SHOWN.
2. LOCK NOT SUPPLIED. USE BATON LOCK TYPE 6086-00KAL06 WITH SUPPLIED CAM
3. LOCKING DOOR SUPPLIED IN POSITION No 1. TO CHANGE THE DOOR POSITION THE CASH BOX MUST BE REMOVED GIVING ACCESS TO 3 SCREWS M3x4 LONG.
4. THE DOOR POSITION WILL BE SUPPLIED TO CUSTOMERS PREFERENCE FOR DELIVERIES OVER 500 UNITS.
5. REFER TO GA329 FOR OPERATING AND TECHNICAL INFORMATION

1	PROJ-REL	28-6-05	MKS	DO NOT SCALE	IF IN DOUBT - ASK !!!	DATE	SCALE	MATERIAL	FINISH	TOOL No.
ISSUE No.	MOD No.	DATE	MOD BY	ALL DIMENSIONS SHOWN ARE NOMINAL SIZES.		27-6-05	NTS			
1				3/16 ANGLE PROJECTION.		28-6-05				
TITLE: NV9 OUTLINE DRAWING - LOCKING										
C.A.D. GENERATED - MOD'S TO BE DONE VIA MAGNETIC MEDIA										
DRAWN: PD										
CHECKED: PD										
DATE: 28-6-05										
DATE: 28-6-05										
MATERIAL: NTS										
FINISH: NTS										
DRG No. GA332										
ISSUE 1										



APPENDIX B – ESCROW FUNCTION

The NV9 has a single note escrow facility (pin 10) used in Parallel, Pulse and Binary modes. This allows the Validator to hold onto the note once accepted, and then only stack the note in the cash box when the host machine confirms that the Vend operation has been completed. If no confirmation of the Vend is received then the note will be returned to the customer after 30 seconds, (see figure 19).

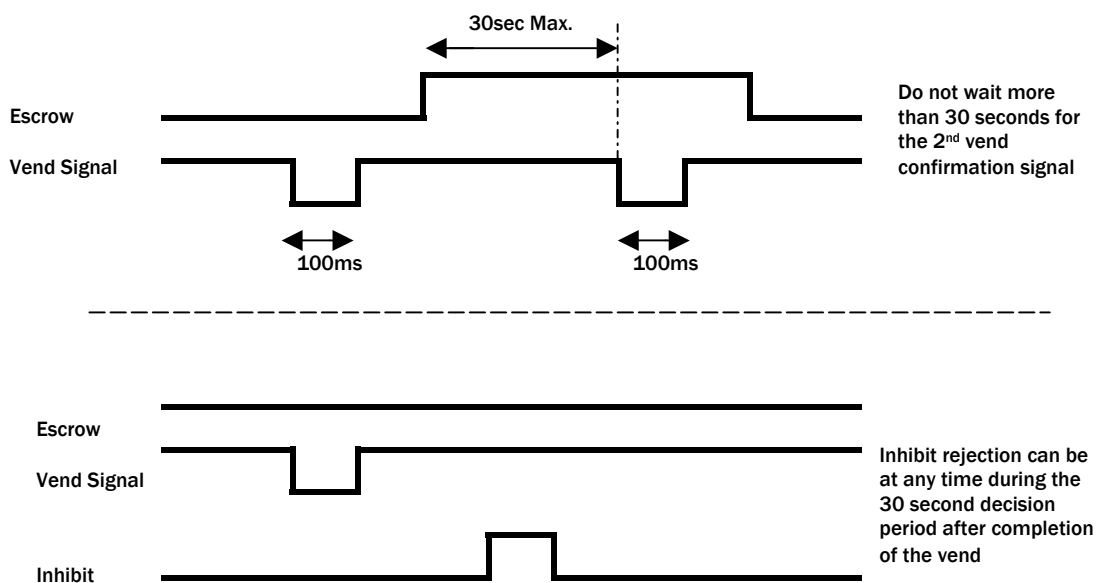


Figure 13 - Escrow Timing Diagram

If the host machine itself aborts the transaction by setting the corresponding inhibit input high, the note is returned immediately. The sequence of operations is as follows:

- Pin 10 held low awaiting note insertion.
- Note inserted. Validator issues a 100ms pulse on the appropriate channel.
- The host machine initiates vend process.
- The host machine sets pin 10 high to indicate that it wants the note. If this is not done within 30 seconds the Validator will return the note.
- The Validator issues a 100ms pulse on the appropriate channel after pin 10 going high to indicate final acceptance of the note. If the signal has not been received within 30 seconds it indicates the customer has forcibly retrieved the note and the vend will be aborted.
- The vend process is completed.
- The host machine sets pin 10 low in expectation of the next vend.
-

The host machine can force the return of the note to the customer by setting the inhibit line high, at any time before the end of the 30 second time-out. For channels above 4, setting all the inhibits high will cause a note reject.

In the event of a note being forcibly removed from the mouth of the NV10 during the 30-second interval, the NV10 will go out of service for 45 seconds.

APPENDIX C – INTERFACE TOOLS DA1 - DA2

The DA1/2 Kits are designed for the following:

- Connecting of ITL Note Validators to a PC for the upgrade and user option setting of Currency and Firmware files.
- Testing note acceptance of Note Validators independent of the host machine to confirm that the validator is working.

The DA1 and DA2 Kits comprise the following components:

DA1	DA2
DA1 adapter board	DA2 adapter board
DA1 to NV7, 8, 9 and 10 cable	USB type-A to Type-B cable
DA1 to NV4 Cable	DA2 to NV7, 8, 9 and 10 cable
Power Cable	Power Cable
ITL Support CD-ROM	ITL Support CD-ROM

Connecting a DA1 to a validator and PC

For the PC system specification and set up refer to Appendix F.

Connect the DA1 to the validator as shown below (see figure 1), using the 16-way to 5-way connector. The supplied 3.5mm jack plug and 2 banana plugs are used to supply power to the DA1 when using a variable Bench power supply (Connect the +12 volts to the red banana plug and GND (0V) to the black plug). Alternatively a Portable DC Power Adapter supplying 12v and 1.5A minimum can be used.

Plug the 9-way D-type connector into the serial port of the PC and note of the number of the port, as this will be needed later for configuring the software. Once the connections have been made install the appropriate software for the validator you are using.

NOTE: The Validator must be in SSP mode when connected to a computer and then returned to the Original Settings when the download is complete.

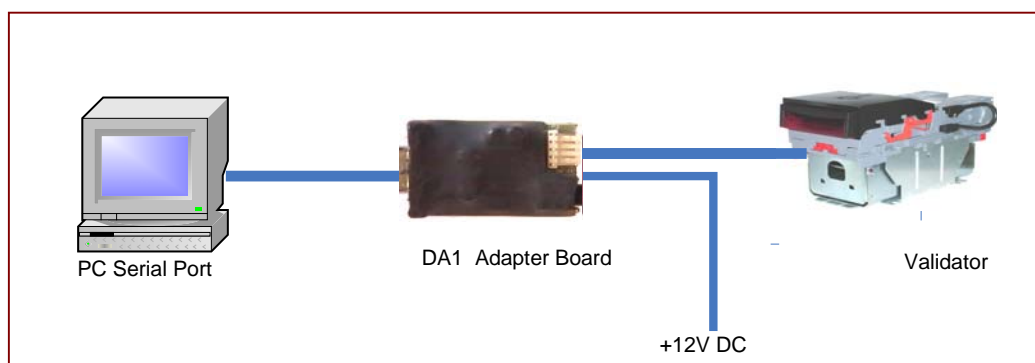


Figure 14 - Connecting DA1 to a NV9 and PC for upgrading

Connecting a DA2 to a validator and PC

For the PC system specification and set up refer to Appendix F. Details of how to install the DA2 are provided in the Support CD.

Plug the USB type Connector into the USB port of the PC. Once the connections have been made install the appropriate software for the validator you are using.

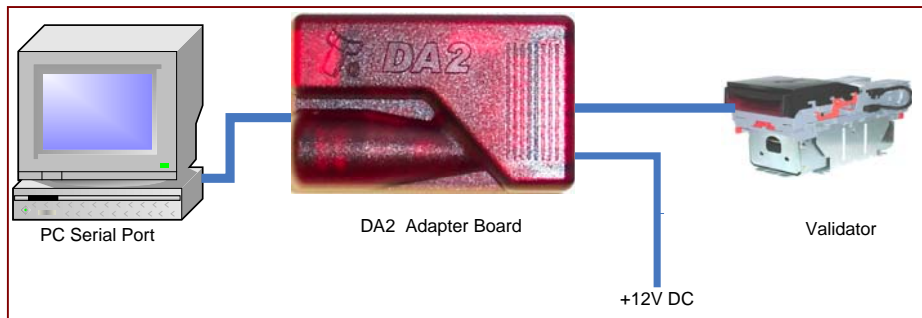


Figure 15 - Connecting DA2 to a NV9 and PC for upgrading Software Installation

Software Installation

DA1 - To install the ITL BNV Download Manager Software insert the CDROM into the correct PC drive. The CD should automatically run and an installation menu will appear. Double click the ITL BNV Download Manager and follow the on-screen instructions. You can also install the Currency files, Firmware files and the Technical Manuals for each specific product as well as other generic documentation. The Quick Start Guide for the DA1 is document number GA151.

DA2 - To install the ITL BNV Download Manager Software insert the CDROM into the correct PC drive. The CD should automatically run and an installation menu will appear. Double click DA2 installation guide (GA338) and follow the instructions relating to your specific Operating System.

NOTE: All files contained on the CD are available from the ITL website:
www.innovative-technology.co.uk

Please contact support@innovative-technology.co.uk, if you require further assistance.

APPENDIX F – PC SYSTEM SPECIFICATION

The ITL Validator Software has been tested and verified using Windows 2000/XP™ on a Pentium™ based PC System (© Microsoft and Intel). Full functionality cannot be guaranteed on lower specification systems.

INDEX

INDEX OF TABLES

Table 1 - Environmental requirements	5
Table 2 - Power requirements	5
Table 3 - Switch 3 & 4 machine interface selection	8
Table 4 - LED status	9
Table 5 - 16 pin connector detail	10
Table 6 - Interface Logic Levels	11
Table 7 - Serial interface input and outputs	11
Table 8 - Receive and transmit codes	16
Table 9 - Example protocols	17
Table 10 - Extended interface USA serial	21

INDEX OF FIGURES

Figure 1 - The NV9 validator	6
Figure 2 - User display and DIPswitch settings	7
Figure 3 - Interface connector	9
Figure 4 - Input and output circuits	10
Figure 5 - Typical Serial Output: Transmission of the value 20 (decimal), Note not recognized	15
Figure 6 - Typical Serial Output: Transmission of the value 20 (decimal), Note not recognized	18
Figure 7 - MDB Opto Isolated Input / Output circuits NV9 MDB Slave	19
Figure 8 - ccTalk connector pins on the NV9	20
Figure 9 - Bezel and validator removal	22
Figure 10 - Clip on and slide cash boxes	22
Figure 11 - NV9 sensors	24
Figure 12 - NV9 Note Path and Lozenge Access	25
Figure 13 - Escrow timing diagram	34
Figure 14 - Connecting DA1 to a NV9 and PC for updating	35
Figure 15 - Connecting DA2 to a NV9 and PC for upgrading Software Installation	36

REVISION HISTORY

INNOVATIVE TECHNOLOGY LTD			
TITLE	NV9 OPERATIONS MANUAL		
DRAWING NO	AUTHOR	DATE	FORMAT
GA326-6	TJC	29/10/04	MS Word 2000

ISSUE	RELEASE DATE	MODIFIED BY	COMMENTS
1	29/10/04	TJC	First Draft
2	21/06/05	ATG	Second Draft
3	14/07/05	RJS	First Release
4	31/08/06	WB	Editorial Update
5	29/05/07	MLC	Addition of belt cleaning to 10.1
6	20/02/08	RJS	Modified interfaces section. Removed website registration appendix. Corrected bezel width for PA324.

Smiley® and the ITL Logo are international registered trademarks and they are the property of Innovative Technology Limited.

Innovative Technology has a number of European and International Patents and Patents Pending protecting this product. If you require further details please contact the factory. Innovative Technology is not responsible for any loss, harm, or damage caused by the installation and use of this product. This does not affect your local statutory rights. If in doubt please contact Innovative Technology for details of any changes.

In line with continued product development Innovative Technology Ltd. reserves the right to change specifications without prior notice. The data used in this document may be used as a guideline only.